

## 4.3 Commands

CL CLEar : Unfixes one or more motors or power supplies.  
CO COunt : Counts for given preset TIme or MoNitor.  
DO DO : Runs a jobfile without testing the syntax first.  
DR DRive : Changes a variable and drives spectrometer to its new position.  
FI FIx : Fixes a given motor or power supply, FIx without argument will give a list of fixed motors and power supplies.  
FM FindMax : As FindZero but SetZero is not performed, the spectrometer is only driven to the maximum.  
FZ FindZero : Scans a simple variable, finds maximum, drives to maximum and performs a SetZero with the given value.  
LI LList : Listing of variables and parameters.  
LE ListEnergies : Energies, k and Q values.  
LL ListLimits : Limits and zeros.  
LZ ListZero : Limits and zeros.  
LM ListMach : Machine parameters.  
LS ListSample : Sample parameters.  
LT ListTargets : Targets and positions.  
LD ListDiaphragms : Diaphragms.  
LP ListPower : Power supply values.  
LO LOg : Controls terminal logging.  
OF OFF : Turns flipper off.  
ON ON : Turns flipper on.  
OU OUtput : Defines output variables.  
PA Pol.An. : Defines a polarization analysis file (default file ext'n is .PAL).  
PR PRint : Prints one ore more variables or parameters.  
RU RUn : Runs a jobfile.  
SC SScan : Scans a variable with given or previously defined increment, number of points and time interval or monitor count.  
SE SEt : Sets a parameter value.  
SF ScanFast : Scans a variable quickly.  
SW SWitch : Sets some switches.  
SZ SetZero : Set zero in such a way that value as given is defined as actual position of variable (works only for simple variables, i.e. variables that have a zero).

### 4.3.1 CLEAR