

Manufacturer

Stoe & Cie GmbH
www.stoe.de

Controller

Eurotherm 2416
www.eurotherm.com/products/controllers/2416.htm
www.eurotherm-deutschland.de

Turning On the Oven

1. Install the thermocouple.
2. Connect the power cable.
3. Connect the cooling water flexible tubes (chiller and oven).
4. Switch on the beamline cooling water and open the water valves.
5. Start the chiller. Check that the water flow on the controller is over 80 l/h.
6. Connect the serial cable from the X04SA-VME-ES2 crate to the *COMPUTER* connector on the controller.
7. Check that the EPICS display panel is **disabled** (see Figure 1).
8. Check that the *Heizung* switch is **off**.
9. Switch on the controller's main power switch.
10. Press and hold the *Run* button (see Figure 2) on the Eurotherm 2416 controller for about 3 secs. The *Run Light* should go out, if it was on.
11. Click *Enable* on the EPICS display. Wait until the display changes to the **enabled** mode (see Figure 3).
12. Click *Reset*.
13. Set a low temperature on the EPICS display. The Output Level should start to drop if the set temperature had previously been high. Wait for the level to drop below 5%, say.
14. Turn on the *Heizung* switch. The green light in the switch should come on.

15. Try some small temperature changes. Monitor the oven's behaviour with the EPICS strip tool.
 16. Normal operation of the oven should now be possible.
-

Turning Off the Oven

1. Set a low temperature on the EPICS display and wait for the *Output Level* to drop to zero.
 2. Click *Disable* on the EPICS display. Wait until the display changes to the **disabled** mode.
 3. Turn off the *Heizung* switch. The green light in the switch should go out.
 4. Switch off the controller.
 5. Switch off the chiller.
 6. Close the beamline cooling water valves.
-

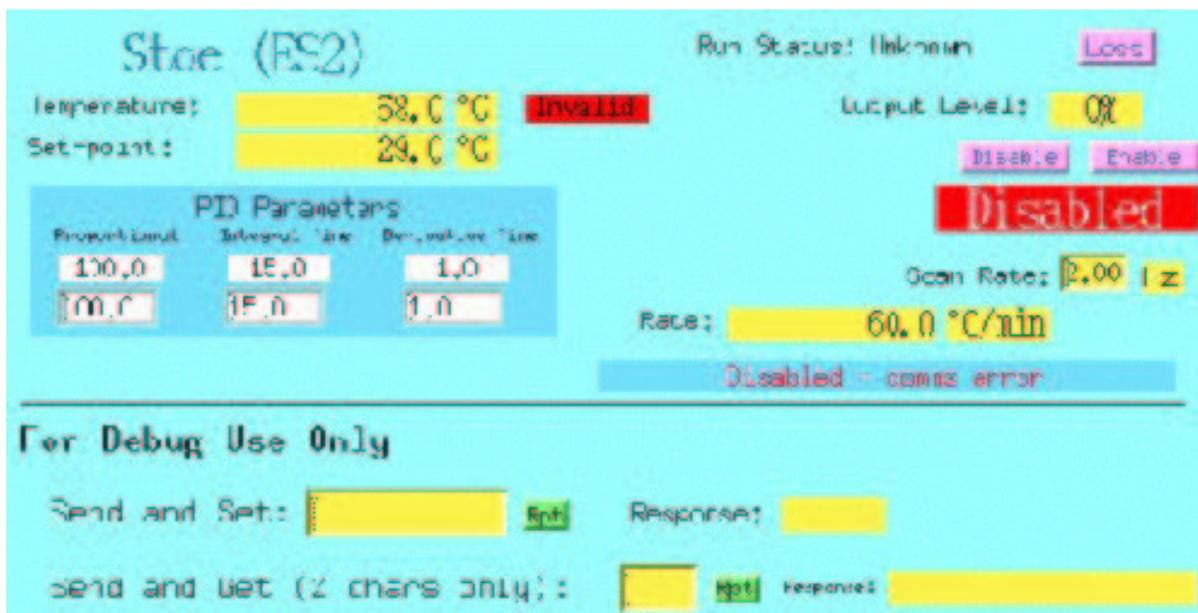


Figure 1: EPICS Panel in Disabled Mode

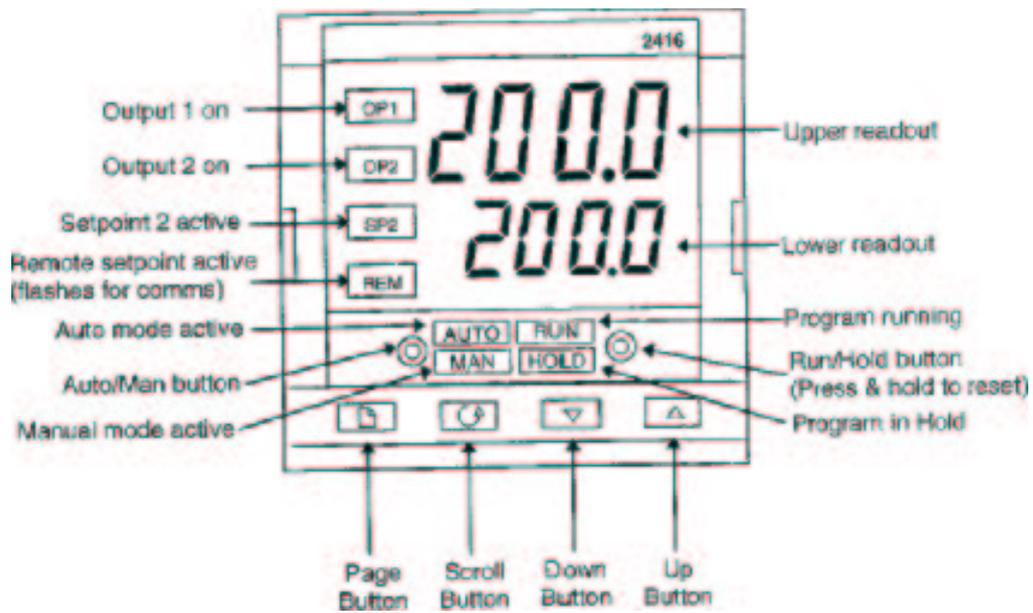


Figure 2: Eurotherm 2416 Front Panel

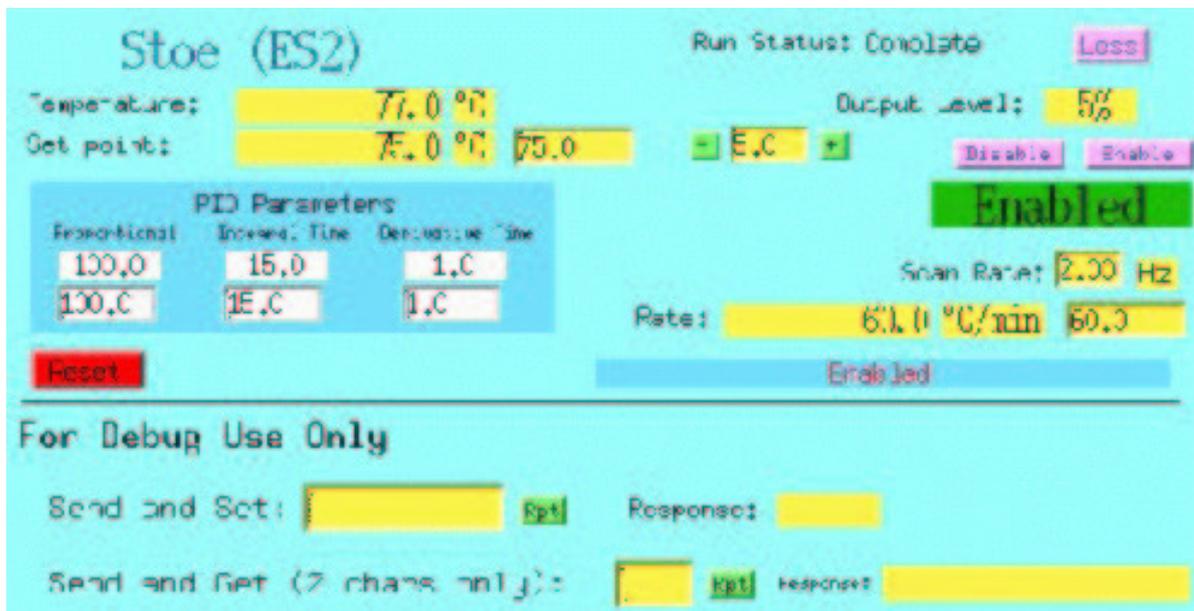


Figure 3: EPICS Panel in Enabled Mode